

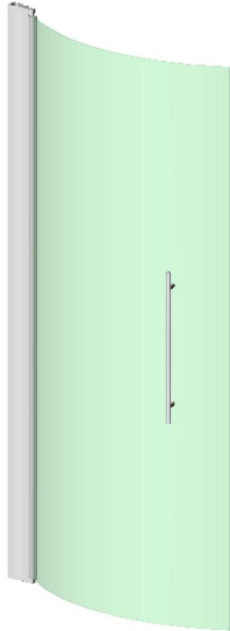
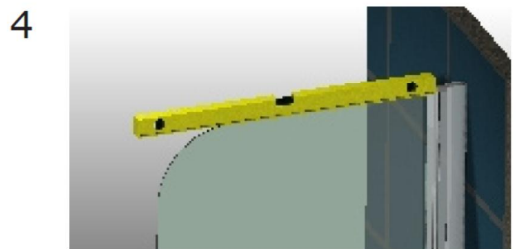
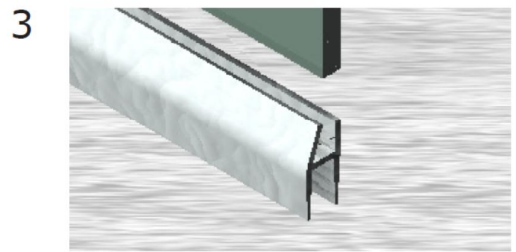


Generic Fitting Instructions for **Bath Shower Screens**

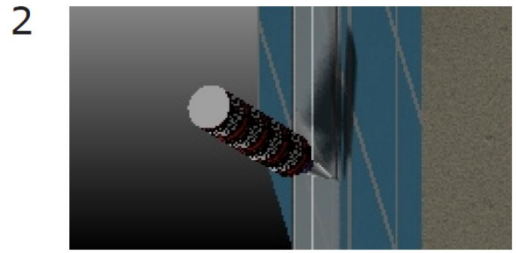

1. Position wall profile extrusion against the wall, making sure it is plumb. Fix it to the wall using supplied screws and wall plugs (use 6 mm drill bit).
2. Apply Silicone along joint line between wall profile and wall to prevent leaks.
3. Push clear seal onto the bottom edge of the glass screen making sure the end is level with the edge of the glass.
4. Position screen in wall profile, making sure it is level and resting on the edge of the bath.
5. Attach screen to wall profile by putting supplied pan head screws in pre-drilled holes in hinge profile.
6. Push supplied black cover strip into recess of wall profile to cover screws.

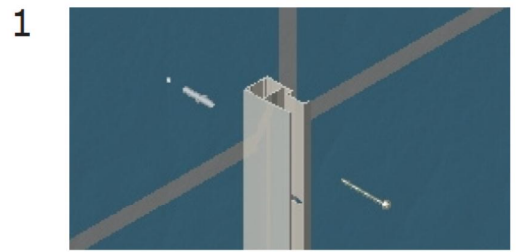

 **ADAMSEZ**[®]

Unit F Carryduff Business Park
Comber Road
Carryduff, BT8 8AN
T: +44 (0) 28 9081 7631
F: +44 (0) 28 9081 3640
E: info@adamsez.com
W: www.adamsez.com